




Fitting Instructions for RAD0095 Radiator Guard
Triumph Sprint GT and ST 2010-

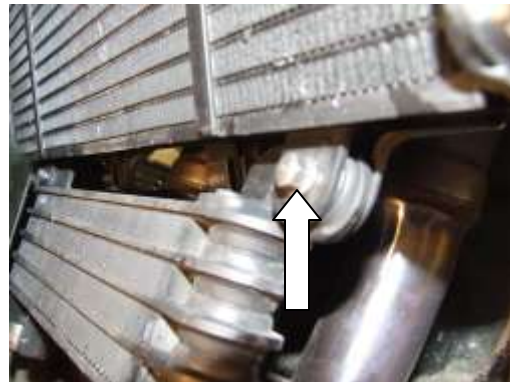

PICTURE 1



PICTURE 2



PICTURE 3



In This Kit There Should Be
1x Radiator Guard (RAD0095)
3x 100mm Lengths of Foam
2 x Cable/Zip Ties

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove front triangular shaped grille.
- Remove front radiator infill panels.
- Remove both side fairings.
- Remove the two bottom radiator-mounting bolts in positions arrowed in pictures 1 & 2.
- Offer radiator guard into position and secure using the original bolts as shown in pictures 1 & 2.
- Using the two cable/Zip ties from kit secure the radiator guard in position through slots in guard and around the top radiator mounting brackets (cut the excess from the cable ties).
- Refit and secure the right hand fairing.
- Slip the bottom radiator guard mounting bracket under the captive spring nut as shown in picture 3.
- Refit and secure the left hand fairing (ensure when fitting the front bottom fairing bolt that the radiator guard bracket is securely sandwiched in place) .
- Refit and secure front radiator infill panels.
- Refit and secure front triangular shaped grille.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



Instructions de montage

RAD0095 Grille de protection radiateur
Triumph Sprint GT and ST 2010



Image 1



Image 3

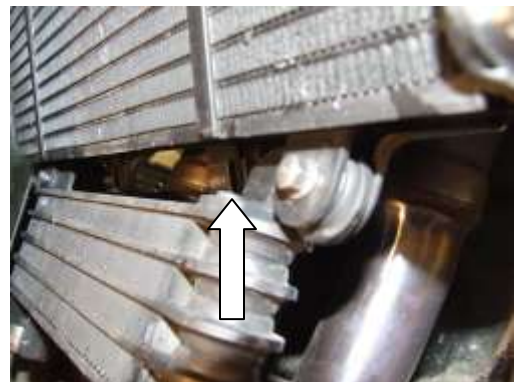


Image 2



Le kit doit contenir

1x Protection radiateur (RAD0095)
3x 100mm Longueurs de mousses.
2 x Cable / Attaches câble.

- Pour installer la grille radiateur sur la moto, couper la mousse en bandeaux de 10mm et collez-les au bas de la protection radiateur pour que les bandeaux soient entre la protection et le radiateur.
- Enlever la grille triangulaire
- Enlever le panneau de remplissage devant le radiateur.
- Enlever le carénage des 2 cotés.
- Enlever les 2 boulons de fixation du bas (Photos 1 et 2).
- Mettre la grille de protection radiateur en position à l'aide des boulons d'origine et fixer (photos 1 et 2).
- A l'aide des 2 attaches câble du kit, fixer la grille de protection à travers les fentes et autour du haut du support de montage de radiateur (Couper le surplus d'attache qui dépasse).
- Remettre et fixer le carénage coté droit.
- Glissez le support de pare fond de montage du radiateur sous l'écrou à ressort (photo 3).
- Remettre et fixer le coté gauche du carénage (S'assurer que lorsque le boulon de fixation du bas de carénage est fixé, le support de protection radiateur soit correctement mis en place, pris en sandwich).
- Remettre et sécuriser le panneau de remplissage devant le radiateur.
- Remettre et fixer la grille triangulaire.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



Montageanleitung für den RAD0095 Kühlerschutz
Triumph Sprint GT und ST 2010-



ABBILDUNG 1

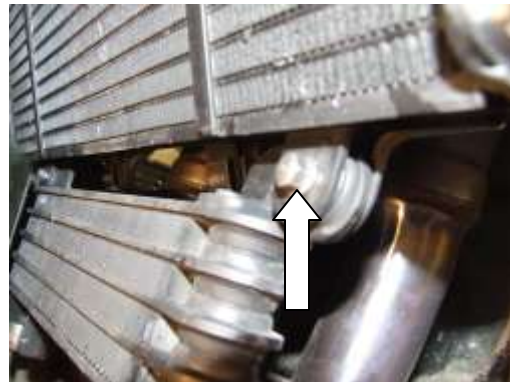


ABBILDUNG 2



ABBILDUNG 3



Dieser Kit enthält:
1x Kühlerschutz (RAD0095)
3x 100mm Schaumstoffstreifen
2 x Kabelbinder

- Um den Kühlerschutz am Motorrad zu montieren, schneiden Sie zuerst die mitgelieferten Schaumstoff-Streifen in 10 mm breiten Streifen und kleben Sie diese auf der Rückseite des Kühlerschutzrahmens, so dass sie zwischen dem Kühlerschutz und dem Kühler angebracht sind.
- Entfernen Sie das dreieckige Gitter vorne.
- Entfernen Sie die Kühlerschutz-Innenverkleidung.
- Entfernen Sie beide Seitenverkleidungen.
- Entfernen Sie beide Montageschrauben für den Kühler (siehe Abbildungen 1 und 2).
- Montieren Sie den Kühlerschutz und befestigen Sie ihn mit den Originalschrauben wie in Abbildungen 1 und 2 abgebildet.
- Befestigen Sie den Kühlerschutz mittels der Kabelbinder vom Kit. Führen Sie die Kabelbinder durch die zwei Schlitze oben auf dem Kühlerschutz führen, dann um die oberen Kühlerschutzhalter. Schneiden Sie die Überlänge der Kabelbinder nach dem festziehen ab.
- Montieren Sie die rechte Seitenverkleidung wieder.
- Schieben Sie die untere Kühlerschutzmontagehalterung unter die selbstsichernde Federmutter (siehe Abbildung 3).
- Montieren Sie die linke Seitenverkleidung (bitte darauf achten, dass die Kühlerschutzhalter sicher positioniert ist, wenn Sie die untere Verkleidungsschraube anbringen bzw. befestigen).
- Montieren Sie die Kühlerschutz-Innenverkleidung wieder.
- Montieren Sie das dreieckige Gitter vorne.